

Phone Image	Model Instructions
	M2006 Instructions
	M2008 Instructions
	M2616 Instructions
	M3902 Instructions
	M3904 Instructions
	1110E Instructions
	1120E Instructions
	1140E Instructions

M2006, M2008, M2616 Quick Reference Guide

Feature	Step 1	Step 2	Step 3
Auto Dial Store number	Press Auto Dial	Dial number	Press Auto Dial
Call number	Select a free DN	Press Auto Dial	
Call Pickup	Select a free DN	Press Call Pickup , or dial the SPRE code__ plus 3	
Call Wait	Press Hold	Press Call Wait	
Conference	Press Conference	Dial number	Press Conference
<i>Note:</i> Repeat the procedure for additional conferees (up to five additional parties).			
Intercom	Select a free DN	Press Intercom	Dial the one- or two-digit code
Forward Activate	Press Forward	Dial number	Press Forward
Cancel	Press Forward		
Reinstate	Press Forward twice		
Message Retrieve a message	Select a free DN	Press Message	

 
Note: If your telephone is equipped with additional features, please refer to your Meridian Modular Telephone user guide.

DN = any extension on your telephone.

Your SPRE (Special Prefix) code is _____.

Feature	Step 1	Step 2	Step 3
Park On your DN	Press Park twice		
Not on your DN	Press Park	Dial new number	Press Park
Retrieve	Select a free DN code__ plus 72	Dial the SPRE	Dial number where it's parked
Using SPRE	Press Transfer or Conference	Dial the SPRE code__ plus 71	Press Transfer or Conference
<i>Note:</i> If your phone is equipped with a display, you can use the System Park number that appears on the screen.			
Redial	Select a free DN	Press Last No or the same DN again	
Ring Again After a busy signal	Press Ring Again and Rls	After Ring Again tone, select a free DN	Press Ring Again
Speed Call or Sys Speed	Select a free DN	Press Speed Call or Sys Speed	Dial code
Stored No To store	Without lifting the handset, press Stored No	Dial number to to store number	Press Stored No
To store during an active call	Press Stored No		
To call a stored number	Select a free DN	Press Stored No	
Transfer	Press Transfer	Dial number	Press Transfer
Voice Call	Pick up the handset	Press Voice Call	After 2 seconds ringing, deliver your message

M3902 Quick Reference Guide

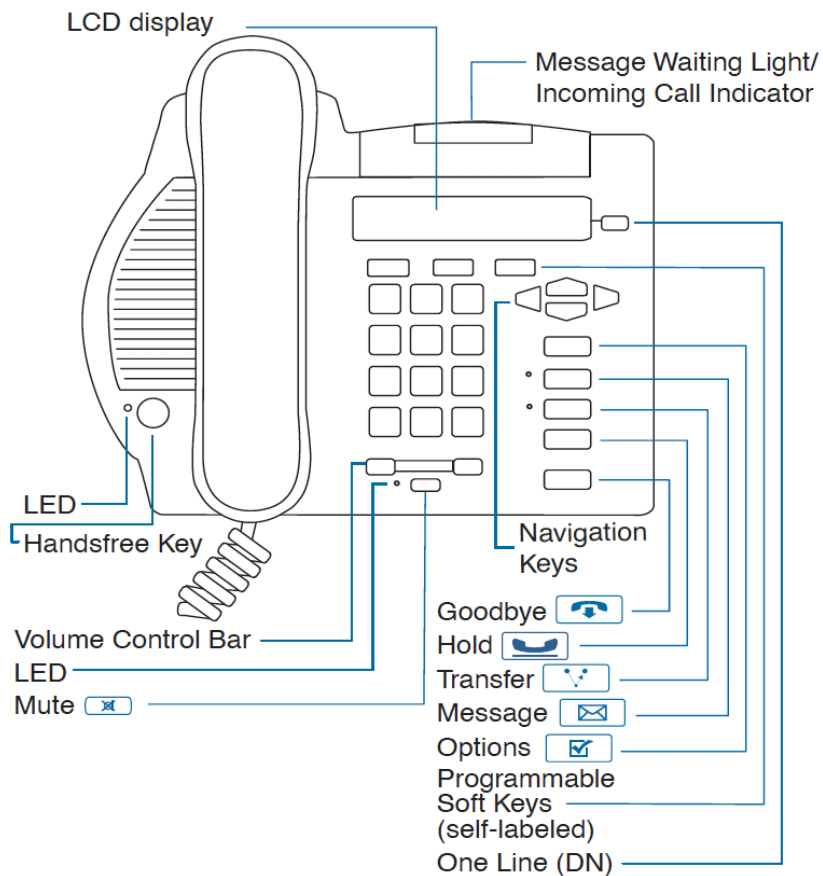

Continued on next page...

Feature Operation

Auto Dial			
store	AutoD1		▶AutoD1
use			AutoD1
display	Display		AutoD1
Hold			
place a call on hold			
return to a held call			
Transfer			
Handsfree (if configured)			
activate			
switch to handset			
handset to handsfree			
Group Listening			
activate			Handsfree LED flashes
Group Listening to handsfree			Handsfree LED is solid
Group Listening to handset			
Mute (On/Off)			
Conference			
	Conf		▶Conf
Last Number Redial			
Ring Again			
activate	RingA9n		
when notified			▶RingA9
cancel	▶RingA9		
Call Forward			
activate	Forward		▶Forward
cancel	▶Forward		
reinstate	Forward		▶Forward
view number	Display		▶Forward
Call Pickup			
			Pickup
Call Waiting			
answer			▶CWait
return to first call			
Message			

Explanations


Legend	
	Lift the handset, or press the DN key, or press the Handsfree key.
	Replace handset, or press to end the call.
	Dial a number.
	Press the line (DN) key.
▶AutoD1	The ▶ flashes when a feature is being programmed. The ▶ lights steadily when a feature is active.
Remarks	
A	Enter or edit the key label (maximum of 7 characters). To access special characters, press the Up Navigation Key. Use the Navigation Keys to locate the character you want to include. Press the Select Key to select the highlighted character. Press the Return Key to return to label entry without selecting a special character.

Programming your Meridian M3902 Telephone

Options List			
Access the Options List			
			Select
Language			
		Done	Quit
Change feature key label			
Select		Select	A Done Quit
Contrast adjustment			
Lower	or Higher	Done	Quit
Volume adjustment			
		Select	Lower or Higher Done Quit
Ring type			
		Play	Done Quit
Call timer control			
On	or Off	Done	Quit
Date/time format			
		Done	Quit
Key click enable			
On	or Off	Done	Quit
Diagnostics mode			
Group listening			
On	or Off	Done	Quit

3904 Quick Reference Guide

 Introducing your Meridian Digital Telephone

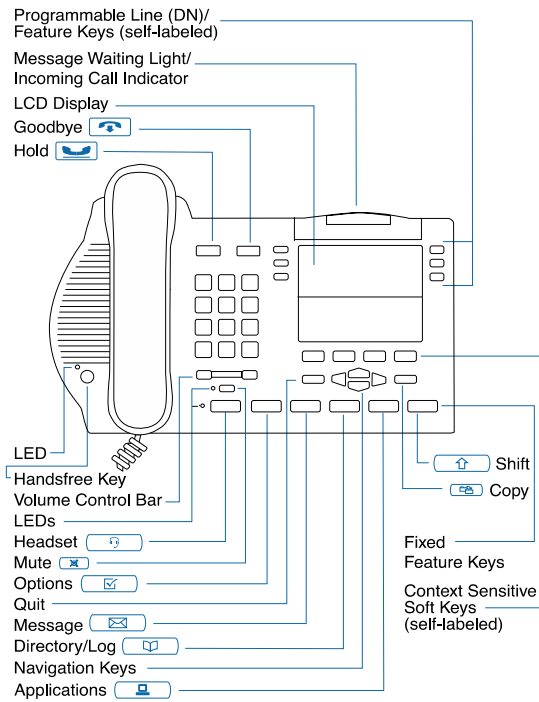

For information on using your M3903 or M3904 telephone when connected to a Meridian SL-100 system, please consult the *Meridian Digital Telephones M3902, M3903, M3904 Quick Reference Guide*.

Programming your Meridian Digital Telephone

Options List

Access the Options List

Select

Language

/ Select Done

Change feature key label

/ Select AutoDial Done

Screen contrast

Lower **or** Higher Done

Volume adjustment

/ Select Lower **or** Higher Done

Ring type

/ Play Select Done

New Call Indication/Call log options

/ On **or** Off / Done

Live dial pad (M3904)

On **or** Off Done

Preferred name match (M3904)

On **or** Off Done

Area code set-up (M3904)

/ Done

Call timer enable

On **or** Off Done

Date/time format

/ Done

Key click enable

On **or** Off Done

Headset port on call (M3904)

On **or** Off Done

Headset port external alerter (M3904)

On **or** Off Done

Call indicator light (M3904)

On **or** Off Done

On hook default path

/ Done

Display diagnostics

/

Group listening (if configured)

 
On **or** Off Done

For additional information on the operation of your telephone, please consult the *Meridian Digital Telephones M3901, M3902, M3903, M3904 User Guide*.

1110E Quick Reference Guide



Continued on next page...

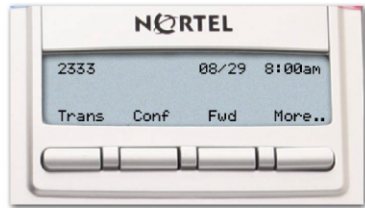

Feature operation

Call Forward			
Activate	Fwd		
Deactivate			
Reinstate	Fwd		
Call Pickup			
			Pickup
Conference			
	Conf		
Hold			
Place a call on hold			(Hold)
Return to a held call			(Line)
Last Number Redial			
			(Line)
Message			
			(Msg/Inbox)
Ring Again			
Activate	RngAgn		
When notified			
Deactivate			
Transfer			
	Trans		
Adjust volume			
			or
		(Volume +)	(Volume -)

Legend

Icon	Action
()	Indicates the key cap text label. For example, (Message).
	Lift the handset.
	Replace the handset.
	Press the goodbye key.
	Dial a number.

Legend (continued)

Icon	Action
	Press the line key.
	An icon flashes when a feature is being programmed. An icon lights steadily when a feature is active.
	Press the Services key once for server-based features, or press the Services key twice for local phone features.
	Press the Message/Inbox key.
	Press the Up/Down Navigation keys
	Press the Enter key
	Press the Expand key

Services and Telephone Options menus

Services menu		
(Services)		
<p>Note: The Services menu contains the Telephone Options, Password Admin, Virtual Office, and MG 1000B menus. These options are not available on all Nortel IP Phone 1110 phones. Consult your system administrator.</p>		

Telephone Options menu

The following are the most commonly used options:

Volume adjustment		
Choose one of:		
. Ringer		
. Handset Listen		
. Listen-only speaker		
. Buzzer		
Contrast adjustment		
Language		
<p>Note: This language setting controls the language used by features on your phone only. To set the language used elsewhere on your phone, press Services twice, select 1. Preferences, and select 2. Language.</p>		
Date/Time format		
Local DialPad Tone		
Ring type		
		Play
Call Timer		
On	Off	

1120E Quick Reference Guide



Continued on next page....

Feature operation

AutoDial		
Store	AutoDial	AutoDial
Use		AutoDial
Display	Display	AutoDial
Call Forward		
Activate	Fwd	Fwd
Deactivate		Fwd
Reinstate	Fwd	Fwd
View number	Display	Fwd
Call Pickup		
		Pickup
Call Waiting		
Answer		Call Waiting
Return to first call		
Conference		
	Conf	Conf
Handsfree		
Activate		(to end the call)
Switch to handset		
Handset to handsfree		
Activate Headset		
		(to end the call)
Hold		
Place a call on hold		
Return to a held call		
Last Number Redial		
Message		
		(Msg/Inbox)
Ring Again		
Activate	RngAgn	
When notified		RngAgn
Deactivate		RngAgn
Transfer		
	Trans	Trans
Adjust volume		
	or	

Legend

Icon	Action
()	Indicates the key cap text label. For example, (Message).
	Lift the handset, press the line (DN) key or the Handset key.
	Replace the handset, or press (Goodbye) to end the call.

Legend (continued)

Icon	Action
	Press a line/feature key.
	Dial a number.
	An icon flashes when a feature is being programmed. An icon lights steadily when a feature is active.
	Press the Services key once for Call Platform features, or press the Services key twice for local phone features.
	Press the Message/Inbox key.
	Press the Up/Down Navigation keys
	Press the Enter key
	Press the Headset key.
	Press the Handsfree key.
	Press the Mute (on/off) key.
	Press the Directory key.
	Press the Quit/Stop key.

Services and Telephone Options menus

Services menu



Note: The **Services** menu contains the **Telephone Options**, **Password Admin**, **Virtual Office**, and **MG 1000B** menus. These options are not available on all Nortel IP Phone 1120E phones. Consult your system administrator.

The following are the most commonly used options:

Telephone Options menu

Volume adjustment

Pick one of:

- Ringer
- Handset Listen
- Handsfree Listen
- Headset Listen
- Buzzer

Contrast adjustment



Language



Note: This language setting controls the language used by features on your phone only. To set the language used elsewhere on your phone, press **Services** twice, select 1. Preferences, and select 2. Language.

Date/Time format



Local DialPad Tone



Ring type



OnHook default path



Note: The **Directory** key provides access to Corporate Directory, Personal Directory, Redial List, and Callers List. For additional information about your IP Phone 1120E, consult the *Nortel IP Phone 1120E User Guide* (NN43112-103).

1140E Quick Reference Guide



Continued on next page...

Feature operation

AutoDial		
Store	AutoDial	AutoDial
Use		AutoDial
Display	Display	AutoDial
Call Forward		
Activate	Forwad	Forwa
Deactivate		
Reinstate	Forwad	Forwa
View number	Display	Forwa
Call Pickup		
		Pickup
Call Waiting		
Answer		Call Waiting
Return to first call		
	(Goodbye)	
Conference		
	Conf	Conf
Handsfree		
Activate		(to end the call)
Switch to handset		
Handset to handsfree		
Activate Headset		
		(to end the call)
Activate or deactivate Bluetooth® technology headset*		
Hold		
Place a call on hold		(Hold)
Return to a held call		
Last Number Redial		
Message		
		(Msg/Inbox)
Ring Again		
Activate	RngAgn	
When notified		RngAgn
Deactivate		
Transfer		
	Trans	Trans
Adjust volume		
		or (Volume -)

Legend

Icon	Action
()	Indicates the key cap text label. For example, (Message).
	Lift the handset, press the line (DN) key or the Handset key.
	Replace the handset, or press to end the call. (Goodbye)
	Dial a number.

Legend (continued)

Icon	Action
	Press a line/feature key.
	An icon flashes when a feature is being programmed. An icon lights steadily when a feature is active.
	Press the Services key once for Call Platform features, or press the Services key twice for local telephone features.
	Press the Message/Inbox key.
	Press the Up/Down Navigation keys
	Press the Send/Enter key
	Press the Headset key.
	Press the Handsfree key.
	Press the Mute (on/off) key.
	Press the Directory key.
	Press the Quit/Stop key.

Services and Telephone Options menus

Services menu

(Services)		

Note: The **Services** menu contains the **Telephone Options**, **Password Admin**, **Virtual Office**, and **MG 1000B** menus. Some options are not available on all IP Phone 1140E phones. Consult your system administrator.

The following are the most commonly used options:

Telephone Options menu

Volume adjustment			
Pick one of:			
Ringer			
Handset Listen			
Handsfree Listen			
Headset Listen			
Buzzer			
			(Quit)

Contrast adjustment

			(Quit)
--	--	--	--------

Language

			(Quit)
--	--	--	--------

Note: This language setting controls the language used by features on your phone only. To set the language used elsewhere on your phone, press **Services** twice, select 1. Preferences, and select 2. Language.

Date/Time format

			(Quit)
--	--	--	--------

Local DialPad Tone

			(Quit)
--	--	--	--------

Ring type

	Play		(Quit)
--	------	--	--------

On-Hook default path

			(Quit)
--	--	--	--------

Note: The **Directory** key provides access to the Corporate Directory, Personal Directory, Redial List, and Callers List. For additional information about your IP Phone 1140E, consult the *Nortel IP Phone 1140E User Guide*.

* To use a headset equipped with *Bluetooth®* wireless technology, you must first configure the headset and your phone to work together. Consult the *Nortel IP Phone 1140E User Guide*.